


Connections Guide


1. Aerial Connections

- Connect the cable from the satellite dish to LNB IN.

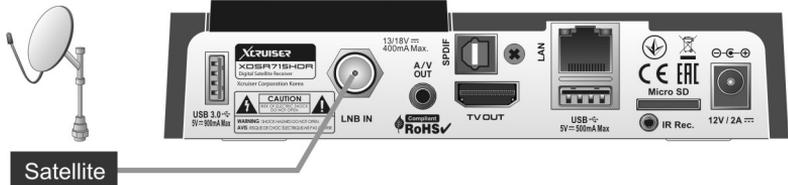


1. Digital A/V Output Connections

- Connect the TV OUT Cable to the TV OUT Connector of your TV.
- Connect SPDIF to Digital audio input of the equipment (Digital Audio)

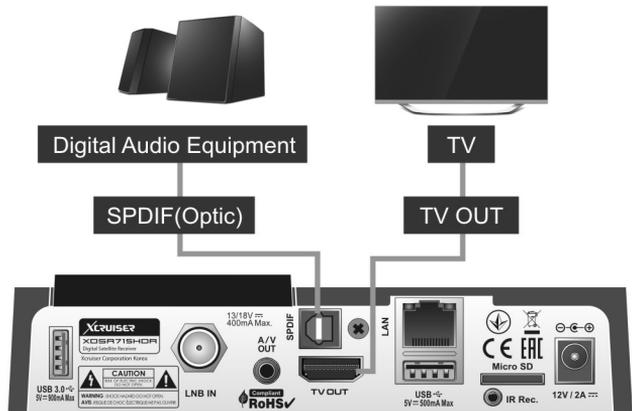

1. Composite Video Connections

- Connect the RCA to the RCA input of your TV.

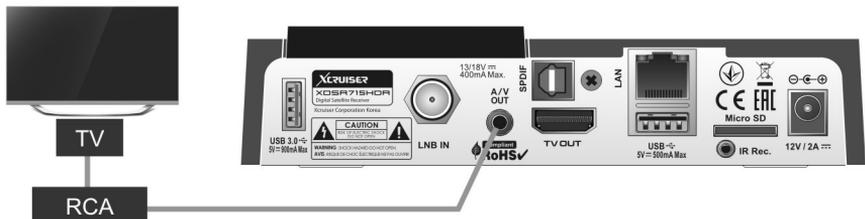

Troubleshooting

Problem	Solution
No or Bad Signal	<p>For Satellite tuner module</p> <ul style="list-style-type: none"> • Check the LNB ; Replace the LNB if necessary. • Check the cable from the LNB. • Check the position of the dish; realign dish if necessary. • If you are using a DiSEqC 1.0 switch, check that you have connected and programmed the LNBs to the correct connections on the switch. <p>Common features for all types of DVB receivers</p> <ul style="list-style-type: none"> • Check the 'Signal Level' and the 'Signal Quality'.
Poor picture quality	<ul style="list-style-type: none"> • See 'No Picture' above. • Check the signal level, if this is low then tries adjusting the alignment of your dish.
No Picture	<ul style="list-style-type: none"> • See 'Does not display any message on the front panel' above. • To match the STB system with your TV system (PAL/NTSC), press V.Format button until a picture is displayed. • Check the video output port is firmly connected to the TV or VCR. • Check that you have selected the Video Input on your TV. • Check the brightness level of the TV. • Check the resolution that your TV supports, and set the proper resolution with the remote Resolution button to obtain a picture.
Does not display any message on the front panel.	<ul style="list-style-type: none"> • Check the main power cable and check that it is plugged into a suitable power outlet
No Sound	<ul style="list-style-type: none"> • See 'No Picture' above. • Check the volume level of the TV and STB. • Check the Mute status of the TV and STB.
Remote Control does not operate	<ul style="list-style-type: none"> • Point remote control directly towards the STB. • Check that the STB button lights up when you press any button. • Check and replace batteries.

Included Accessories

				
Remote control	Batteries	Power adapter	TV OUT cable	Quick Installation
		Optional 	Optional 	Optional 
A/V Phone jack cable	Warranty Card	Remote control extender	TV mount bracket	Joystick